



CabanaCoast® Fire Natural Gas Installation
(Conversion kit required)
 User Manual for:
 CB-20, CB-1224, CB-1242, CB-2424

CAUTION



Important operating and maintenance instructions included.

DO NOT DISCARD THIS MANUAL

Read, understand and follow these instructions for safe installation and operation.

DO NOT DISCARD

! WARNING

If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **What to do if you smell gas:**
 - Do not try to light any appliance.
 - Do not touch any electrical switch. Do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

! WARNING

Improper installation, adjustment, alteration service or maintenance can cause injury or property damage.
 Read the installation and maintenance instructions thoroughly before installing or servicing this equipment.

! WARNING

HOT! DO NOT TOUCH. SEVERE BURNS MAY RESULT. CLOTHING MAY CATCH FIRE.



- Glass and other surfaces are hot during operation and cool down.
- Keep children away.
- **CAREFULLY SUPERVISE** children near or around this appliance.
- Alert children and adults to hazards of high temperatures.
- Keep clothing, furniture, draperies and other combustibles away.

! WARNING

For outdoor use only.

! WARNING

It's imperative the burner be kept clean.



Installation and service of this appliance should be performed by qualified personnel. CabanaCoast® suggests NFI certified or factory-trained professionals, or technicians supervised by an NFI certified professional.

**Read this manual before installing or operating this appliance.
Please retain this owner's manual for future reference.**

Congratulations on selecting a CabanaCoast® Fire Pit decorative gas appliance. The CabanaCoast® Fire Pit you have selected is designed to provide the utmost in safety, reliability, and efficiency.

As the owner of a CabanaCoast® Fire Pit, you'll want to read and carefully follow all of the instructions contained in this owner's manual. Pay special attention to all cautions and warnings.

This owner's manual should be retained for future reference. We suggest you keep it with your other important documents and product manuals.

The information contained in this owner's manual, unless noted otherwise, applies to all models and gas control systems.

Your new CabanaCoast® Fire Pit will give you years of durable use and trouble-free enjoyment.

Homeowner Reference Information

We recommend that you record the following pertinent information about your appliance:

Model Name: _____
 Date purchased/installed: _____
 Serial Number: _____ Location on appliance: _____
 Dealership purchased from: _____ Dealer phone: _____
 Notes: _____

Listing Label Information/Location

The model information regarding your specific appliance can be found on the rating plate attached to your burner via a metal chain. See the sample rating plate below for locations of specifications.





 ANSI Z21.97-2014 / CSA 2.41-2014			CABANA COAST® Actiwin Company Limited Mississauga, ON, CANADA										
Decorative Outdoor Gas Fire Fire Pit													
CabanaCoast® Firepit Model: 50"x32" Firepit Type: Natural gas or Propane Gas ORIFICE SIZE: NG = #31 LPG=# 43 Min. Gas supply for input Adj. Max Inlet Supply Pressure BTU input	Series No.: <table style="width:100%; border: none;"> <tr> <td style="width: 33%;">LPG</td> <td style="width: 33%;">NG</td> <td style="width: 33%;"></td> </tr> <tr> <td>11.0 In.w.c(2.7kpa)</td> <td>7.0 In.w.c(1.7kpa)</td> <td></td> </tr> <tr> <td>14.0 In.w.c(3.5kpa)</td> <td>14.0 In.w.c(3.5kpa)</td> <td></td> </tr> <tr> <td>63,000 Btu/hr</td> <td>55,000 Btu/hr</td> <td></td> </tr> </table>	LPG	NG		11.0 In.w.c(2.7kpa)	7.0 In.w.c(1.7kpa)		14.0 In.w.c(3.5kpa)	14.0 In.w.c(3.5kpa)		63,000 Btu/hr	55,000 Btu/hr	
LPG	NG												
11.0 In.w.c(2.7kpa)	7.0 In.w.c(1.7kpa)												
14.0 In.w.c(3.5kpa)	14.0 In.w.c(3.5kpa)												
63,000 Btu/hr	55,000 Btu/hr												
<p>WARNING</p> <ol style="list-style-type: none"> 1. Must not be used for cooking 2. The current configuration of the appliance is for LP gas. 3. For outdoor use only. If stored indoors, detach and leave cylinder outdoors. 4. An unconnected LP-cylinder should not be stored in the vicinity of this or any other appliance. 5. Keep a safe distance to avoid an explosion. <p>The instruction manual contains important information necessary for the proper assembly and safe use of the appliance. Read and follow all warnings and instructions before assembling and using the appliance. Follow all warnings and instruction when using the appliance.</p> <p>Minimum clearance: Top: 6Ft. (72") sides: 3ft. (36") Minimum clearance from sides and back of unit to adjacent combustible construction below top of unit, 36 inches from sides 36 inches from back. Distance from cylinder to the appliance should keep at least 8 inches.</p> <p>WARNING: Improper installation, adjustment, alteration service or maintenance can cause injury or property damaged. Refer to the owners information manual provided with this appliance. For assistance or additional information consult a qualified installer, service agency or the gas supplier.</p>		<div style="border: 1px solid black; padding: 5px;"> <p align="center">CARBON MONOXIDE HAZARD</p> <p align="center">⚠ DANGER</p> <div style="display: flex; align-items: center;">  <p style="font-size: small;">This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or home.</p> </div> </div>											

Table of Contents

<p>1. Listing and Code Approvals..... 4</p> <p style="padding-left: 20px;">A. Appliance Certification..... 4</p> <p style="padding-left: 20px;">B. BTU Specifications..... 4</p> <p>2. Getting Started 5</p> <p style="padding-left: 20px;">A. Design and Installation Considerations..... 5</p> <p style="padding-left: 20px;">B. Tools and Supplies Needed..... 5</p> <p style="padding-left: 20px;">C. Inspect the Appliance and Components 6</p> <p style="padding-left: 20px;">D. Step by Step Lighting Instructions..... 6</p> <p>3. Framing Clearances</p> <p style="padding-left: 20px;">A. Selecting a location 6</p> <p style="padding-left: 20px;">B. Required clearance to combustibles 6</p> <p style="padding-left: 20px;">C. Framing Enclosure for LP Gas Supply System. 7</p> <p>4. Fuel Information..... 7</p> <p style="padding-left: 20px;">A. Fuel..... 7</p> <p style="padding-left: 20px;">B. Gas Pressure..... 7</p> <p style="padding-left: 20px;">C. Gas Connection 7</p> <p style="padding-left: 20px;">E. LP Gas Supply..... 7</p>	<p>5. Appliance Setup..... 8</p> <p style="padding-left: 20px;">A. Burner Assembly..... 8</p> <p style="padding-left: 20px;">B. Glass Installation..... 8</p> <p>6. Operating Instructions..... 9</p> <p style="padding-left: 20px;">A. Before Lighting 9</p> <p style="padding-left: 20px;">B. Gas Valve Assembly..... 13</p> <p style="padding-left: 20px;">C. Lighting the Fire..... 14</p> <p style="padding-left: 20px;">D. After the Fire is Lit..... 14</p> <p>7. Finishing..... 15</p> <p>8. Converting to Natural Gas.....</p> <p>9. Troubleshooting..... 16</p> <p>10. Maintaining and Servicing the Appliance.. 17</p> <p>11. Reference Materials..... 18</p> <p style="padding-left: 20px;">A. Service Parts List..... 18</p> <p style="padding-left: 20px;">B. Contact Information..... 18</p> <p style="padding-left: 20px;">C. Limited One Year Warranty 19</p>
---	---

What's included...		
CB-20	CB-1224	CB-1242, CB-2424
<ul style="list-style-type: none"> ●20" Round burner ●Black propane hose with regulator ●Flexible metal gas line ●Valve Assembly ●Piezoelectric igniter (requires 1 AA battery) ●#43 Orifice (LP) ●#31 Orifice (NG) ●2 bags of decorative glass 	<ul style="list-style-type: none"> ●12"x24" burner ●Black propane hose with regulator ●Flexible metal gas line ●Valve Assembly ●Piezoelectric igniter (requires 1 AA battery) ●#43 Orifice (LP) ●#31 Orifice (NG) ●2 bags of decorative glass 	<ul style="list-style-type: none"> ●12"x42" or 24"x24" burner ●Black propane hose with regulator ●Flexible metal gas line ●Valve Assembly ●Piezoelectric igniter (requires 1 AA battery) ●#36 Orifice (CB-2424 only- home LP) ●#31 Orifice(CB-1242 only- Home LP) ●#43 Orifice (20lb LP) ●#17 Orifice (CB-2424 only- NG) ●#21 Orifice (CB-1242 only -NG) ●3bags of decorative fire glass

1 Listing and Code Approvals

A. Appliance Certification

MODEL: CabanaCoast® FIRE PIT CB-20, CB-1224, CB-1242, CB-2424

LABORATORY: CSA Group

TYPE: Decorative Gas-Fired Outdoor Fireplace

STANDARD: IAS US requirements for Outdoor Gas fireplaces, Draft 4-96 and CSA requirement for Outdoor Gas Fireplaces, ANSI Z21.97-2014 / CSA 2.41-2014

The CabanaCoast® Fire Pit has been tested in accordance with IAS US requirements for Outdoor Gas Fireplaces, Draft ANSI Z21.97-2014 / CSA 2.41-2014 and CSA requirement for Outdoor Gas Fireplaces, and has been listed by CSA Group for installation and operation as described in these installation and operating instructions.

The installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code ANSI Z21.97-2014 / CSA 2.41, National Gas Installation Code, Propane Installation Code.

B. BTU Specifications

Model	Orifice Size		
	LP	NG	
CB-20	#43	#31	
Max input BTU	60,000	60,000	
CB-1224	#43	#31	
Max input BTU	63,000	55,000	
CB-1242	Whole-house #31	20lb tank #43	#21
Max input BTU	100,000	60,000	72,000
CB-2424	Whole-house #36	20lb tank #43	#17
Max input BTU	79,000	61,000	106,000

2 Getting Started

This appliance is a Decorative Gas Appliance for **OUTDOOR USE ONLY** and **MUST NOT** be used for cooking.

Place the CabanaCoast® Fire Pit on a flat and stable surface in an outdoor location such as a patio or deck. This location must be adjacent to the gas supply line or LP gas supply cylinder. **DO NOT** locate the appliance where it will get excessively wet or submerged in water.

A. Design and Installation Considerations

When planning an appliance installation, it's necessary to determine the following information before installing:

- Where will the appliance be installed? **See section 3**
- Gas supply piping. **See section 4**
- Framing and finishing details. **See sections 3,7**

B. Tools and Supplies Required

Before beginning the installation, be sure that the following tools and supplies are at hand.

- Gloves
- Safety Glasses
- Phillips screwdriver
- Non-corrosive leak-check solution
- Wrenches
- 1 AAA battery

! WARNING



Actiwin Company Limited disclaims any responsibility for, and the warranty will be voided by, the following actions:

- Installation and use of any damaged components.
- Modification of the burner assembly.
- Installation other than as instructed by Actiwin Company Limited.

Any such action may cause a fire hazard

! WARNING

Asphyxiation Risk

- This gas appliance is for outdoor use in a well-ventilated space.
- This unit must not be installed inside an enclosed structure or unvented appliance

! WARNING

Do **NOT** use this appliance if any part of it has been underwater. Have a qualified service technician inspect the appliance and replace any part of the control system and any gas control which has been underwater.

CAUTION

Sharp Edges

Wear protective gloves and safety glasses during installation

! WARNING

Do not burn solid fuels in this gas appliance

C. Inspect the Appliance and Components

! WARNING

Inspect appliance and components for damage. Damaged parts may impair safe operation.


- Do **NOT** install damaged, incomplete, or substitute components

- Carefully remove all burner components from packaging.
- Read all instructions before beginning installation. Follow these instructions carefully during installation to ensure maximum safety and benefit.

3 Framing and Clearances

Note:

- Illustrations reflect typical installations and are **FOR DESIGN PURPOSES ONLY.**
- Illustrations/diagrams are not drawn to scale.
- Actual installation may vary due to individual design preference.

! WARNING	
	Fire Risk
	Provide adequate clearance:
	<ul style="list-style-type: none">• Around air openings• For service access.
Locate appliance away from traffic areas	

72 inches to overhang from **top** of metal bowl.

If you are not using a CabanaCoast® Fire Pit table with this fire pit table, be sure to mount to a non-combustible surface maintaining at least 8" to combustible surfaces and framing below the surface of burner.

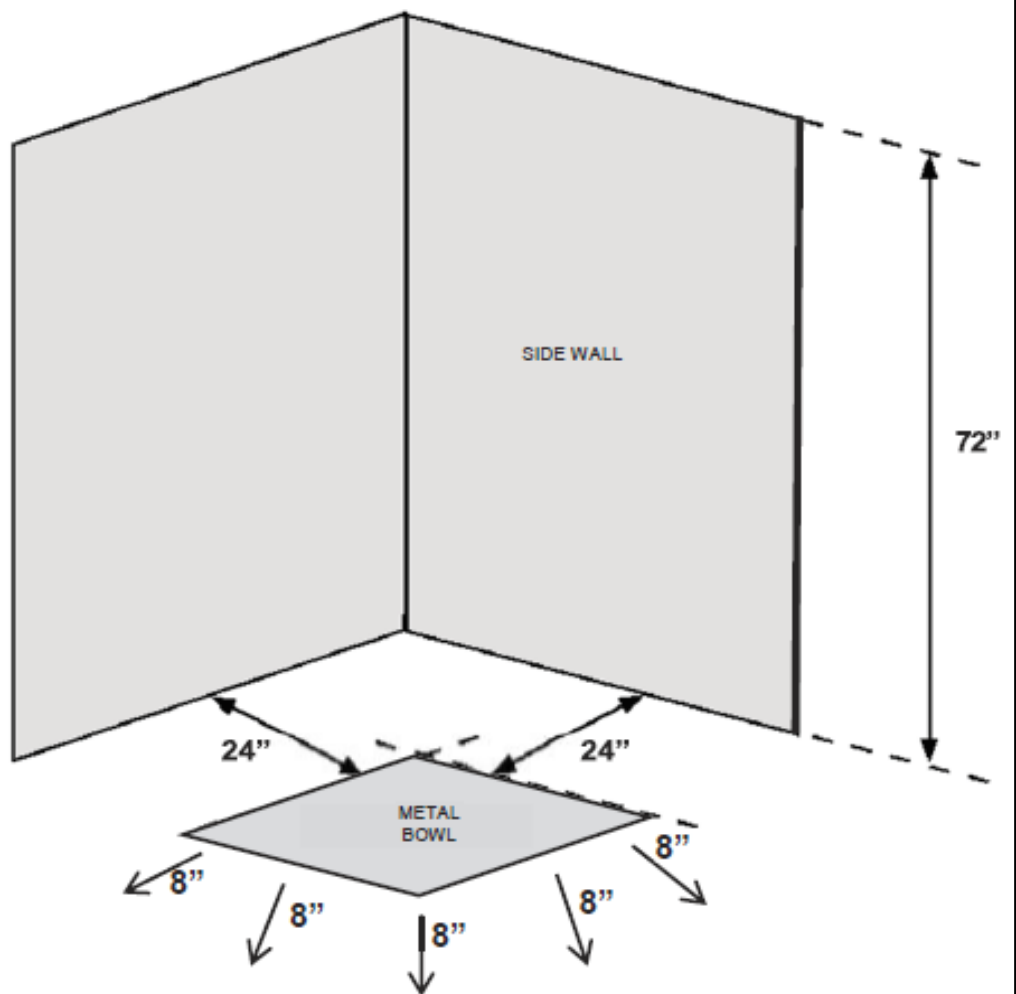


Figure 3.1 Clearances to Combustibles

C. Framing Enclosure for LP Gas Supply System

If you build an enclosure for an LP gas cylinder, follow these recommended specifications and local codes:

Ventilation

Enclosures must be ventilated by openings at the level of the cylinder valve and at floor level. Effectiveness must

be determined with the cylinder(s) in place.

- One side of the enclosure must be completely open or,
 - For an enclosure having four sides, a top and a bottom:
 - At least two ventilation openings at cylinder valve level shall be provided in the side wall, equally sized, spaced at 180 degrees (3.14 rad), and unobstructed. Each opening must have a total free area of not less than 1/2 square inch per pound (3.2 sq. cm/kg) of stored fuel capacity and not less than a total free area of 10 square inches (64.5 sq. cm).
 - Ventilation opening(s) must be provided at floor level and shall have a total free area of not less than 1/2 square inch per pound (3.2 sq. cm/kg) of stored fuel capacity and not less than a total free area of 10 square inches (64.5 sq. cm). If ventilation openings at floor level are in a side wall, there must be a least two openings. The bottom of the openings must be at floor level and the upper edge can't be more than 5 in. (127 mm) above the floor. The openings must be equally sized, spaced at 180 degrees (3.14 rad) and unobstructed.
 - Every opening must have minimum dimensions to permit the entrance of a 1/8 inch (3.2 mm) diameter rod.

Accessibility

- Cylinder valves must be readily accessible for hand operation. A door on the enclosure to gain access to the cylinder valves is acceptable, provided it is **non-locking and can be opened without the** use of tools.
- The design of the enclosure must be such that:
 - The LP gas supply cylinder(s) can be connected, disconnected and the connections inspected and tested outside the cylinder enclosure.
 - Those connections which could be disturbed when installing the cylinder(s) in the enclosure can be leak tested inside the enclosure.
 - Be certain to mount or set the LP gas cylinder on a flat stable surface and retain it to prevent it from tipping.

Minimum Clearances

- There must be a minimum clearance of 2 in. (50.8 mm) between the lower surface of the floor of the LP gas supply cylinder enclosure and the ground.

4 Setting up your Burner

A. Burner Assembly

All Models

- Check for damage. Do not use damaged components.
- The hose assembly must be replaced prior to the appliance being put into operation if there is evidence of excessive abrasion or wear, or if the hose is damaged use a replacement hose assembly
- The replacement hose assembly specified by the manufacturer.
- The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. Use a replacement burner assembly specified by the manufacturer.
- Position the assembly in the desired location. This location must be adjacent to the gas supply line. You must have easy access to the gas valve control knob after it is installed and connected to the gas supply because the ON/OFF gas valve is used to turn the burner on and off.

B. Glass Installation

Spread glass out evenly over burner area. Use all glass provided for best effect. Keep glass clear of igniton electrode to avoid accidental blockage.

Note:

A percentage of glass beads may arrive split in half. This is normal. Additional beads may split after use. This is also normal due to the physical properties of glass.


LP Gas Models

- Make sure the tank valve is turned completely off (clockwise).
- Ensure the tank valve has the proper external
- Small mating threads (tank valve marked “USE WITH TYPE 1”).
- Inspect the hose shipped with the appliance for any damage. Do not use if there is evidence of damage.
- Connect the end of the hose onto the ON/OFF gas valve of the appliance. Make sure it is secured tightly.
- Connect the regulator assembly to the tank valve. Hand-tighten only (clockwise). Do not use a wrench to tighten! Use of a wrench may damage the quick closing nut and result in a hazardous condition.
- Position the hose out of pathways where people might trip over it or in areas where the hose might be subject to accidental damage.

**DO NOT BURN WITHOUT GLASS OR
OTHER SUBSTRATE SUCH AS LAVA
ROCK IN BURNER.**

C. Igniter Installation and Grounding

Your burner includes one of two styles of igniter box. These can be distinguished by the number of wire connector prongs on the back side. If one prong is present, proceed to instructions for “Style A” . If two prongs exist, proceed to “Style B” . Note: Before installing ignition system, ensure that gas valves are closed and gas is disconnected for safety.

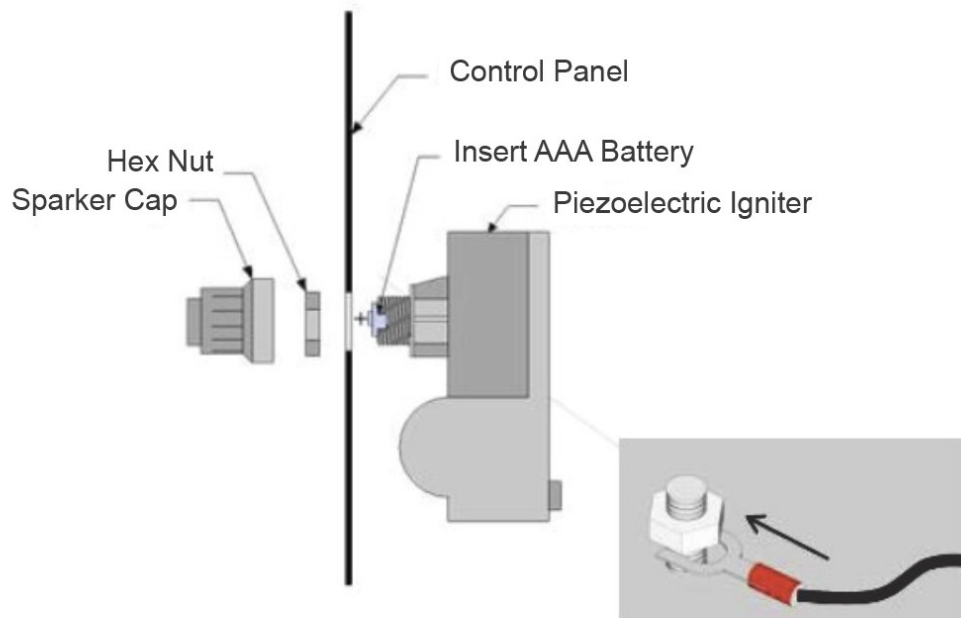

Style A (One prong, self-grounding)

To properly install this igniter style, see diagram above. Self-grounding igniters are designed to be installed mounted to a metal surface such as an CabanaCoast® control panel. If a control panel was not purchased with your burner, an external grounding wire (SPK-GND on page 17 of this user manual) can be purchased to relocate the grounding contact point of this igniter to a nearby metal surface.

Once properly grounded, locate the black wire hanging from your burner and insert it into the port on the back side of the igniter.

Style B (two prongs, externally grounded)

This igniter relies on external grounding for proper operation. A thin surface is required for mounting such as an CabanaCoast® control panel. See above diagram for mounting for proper installation.

A grounding wire is included with your igniter. To install, locate the black wire hanging from burner and plug it into either port on backside of igniter box.

Locate a nearby nut and bolt on bottom of burner and loosen the nut enough to slide the forked end of the included grounding wire underneath the nut as shown above and retighten nut.

Plug the free end of grounding wire into the back of the igniter box to complete installation.

5 Gas Hookup and Information

A. Fuel

Before making gas connections, ensure the appliance being installed is compatible with the available gas type.

B. Gas Pressure

Proper input pressures are required for optimum performance. Gas line sizing requirements need to be made

! WARNING

Fire Risk

Explosion Risk



Verify inlet pressures.

- High pressure may cause overfire condition.
- Low pressure may cause explosion.
- Verify minimum pressures when other household gas appliances are operating

Install regulator upstream of valve if line pressure is greater than 1/2 psig.

Pressure requirements for appliance are shown in table below. Minimum pressures must be met when other household gas appliances are operating.

Pressure	Natural Gas	Propane
Minimum Inlet Pressure	7 in w.c.	11 in. w.c.
Maximum Inlet Pressure	10.5 in w.c.	14 in. w.c.

The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressures in excess of 1/2 psi (3.5 kPa).

The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa).

Note: Have the gas supply installed in accordance with local building codes, if any. If not, follow ANSI 223.1. Installation should be done by a qualified installer approved and/or licensed as required by the locality. (In the Commonwealth of Massachusetts installation must be performed by a licensed plumber or gas fitter.

Note: A listed (and Commonwealth of Massachusetts approved) 3/8 in. T-handle manual shut-off valve and flexible gas connector are connected to the 3/8 in. control valve inlet.

If substituting for these components, please consult local codes for compliance.

Incoming gas line should be piped to the 1/2 inch connection on the manual shutoff valve.

! WARNING

Fire Risk

Explosion Risk



- Gas build-up during line purge may ignite.
- Purge should be performed by qualified technician.
- Ensure adequate ventilation.
- Ensure there are no ignition sources such as sparks or open flames.

• A small amount of air will be in the gas supply lines. When first lighting appliance it will take a short time for air to purge from lines. Subsequent lighting of the unit will not require such purging. **Never allow the ON/OFF valve to remain in the open position without pressing and continuing to hold igniter button FIRST.**

! WARNING

CHECK FOR GAS LEAKS

Fire Risk

Explosion Risk

Asphyxiation Risk



- Check all fittings and connections.
- Do not use open flame.
- After the gas line installation is complete, all connections must be tightened and checked for leaks with a commercially available leak-check solution. Be sure to rinse off all leak check solution following testing.

Fittings and connections may have loosened during shipping and handling


D. LP Gas Supply

- The pressure regulator and hose assembly supplied with LP models must be used. Replacement pressure regulators and hose assemblies must be those specified in this manual.
- The LP gas supply cylinder used with LP models must be constructed and marked in accordance with the specifications for LP gas cylinders of the U.S. Department of Transportation (DOT).
- Cylinders must be stored outdoors in a well ventilated area out of the reach of children. Disconnected cylinders must have threaded valve plugs tightly installed and must not be stored in a building, garage or any other enclosed area.
- Storage of this appliance indoors is permissible only if it has been disconnected from its fuel supply (natural gas line or LP gas cylinder).
- The LP gas cylinder supply system must be arranged for vapor withdrawal.
- The LP gas cylinder used must include a collar to protect the cylinder valve.
- When an LP model is not in use, the LP gas must be turned off at the supply cylinder.
- The specific size and capacity of the cylinder(s) to be used: 20 lb. or hard plumbed to propane tank.


IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION SERVICES, OR MAINTENANCE CAN CAUSE INJURY OR PROPERTY DAMAGE. REFER TO AND UNDERSTAND THIS MANUAL. FOR ASSISTANCE OR ADDITIONAL INFORMATION CONSULT A QUALIFIED INSTALLER, SERVICE AGENCY, LICENSED TECHNICIAN OR THE GAS SUPPLIER.

Gas Setup for Liquid Propane

1. With burner in place in CabanaCoast® fire pit table or other installation location and proper sized orifice inserted in burner neck (see chart on p.4 for orifice sizing), locate flexible rubber propane hose and regulator supplied with this burner.
2. Attach the propane hose to incoming gas fitting on the gas valve. For CabanaCoast® gas valves and control panels, this is the lower fitting. Using two wrenches, one to hold the valve and one to turn the valve fitting. Tighten securely.
3. Locate the metal flex-line gas hose and tighten securely to the top valve fitting following the method described in step 2.
4. Using two wrenches, securely tighten the flare nut on the free end of the metal flex hose to the orifice on the burner.
5. **For liquid propane installations, the air shutter may be left open as shown at right to prevent sooting.** To adjust air shutter, loosen the small securing screw and rotate air shutter to allow more or less airflow. Closing the shutter will produce a more yellow flame but may soot.

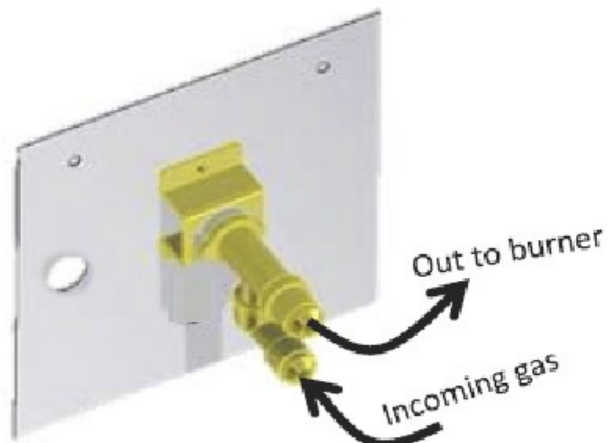


CabnaCoast® fire pit Control panel kit

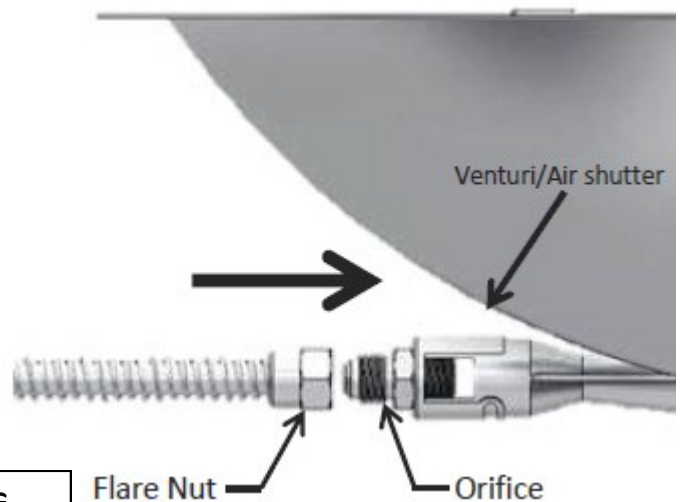


CHECK ENTIRE SYSTEM FOR LEAKS BEFORE OPERATING

Gas Setup for Natural Gas (Conversion kit required)

1. With burner in place in CabanaCoast® fire pit table or other installation location and proper sized orifice inserted in burner neck (see chart on p.4 for natural gas orifice sizing), adjust air shutter to a closed position (as shown at right, no light visible through the shutter) by loosening the small screw on the air shutter and rotating it to a closed position and re-tightening screw.
2. Locate the included metal flex-line hose and thread one end onto orifice and tighten securely with two wrenches.
3. At this point if you are connected to natural gas using a valve assembly such as The CabanaCoast® kit, proceed to step 3a.
 - **3a.** Attach the free end of flex hose to the top outgoing) flare fitting of control valve and tighten with two wrenches. Plumb incoming natural gas to the incoming side of the valve using a 3/8" flare nut. It is strongly recommended that a manual shutoff valve is placed in the natural gas line **before** it reaches the fire pit's control valve.

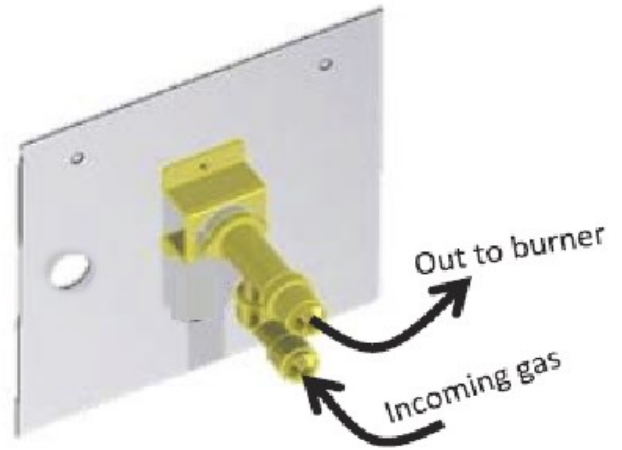

CabanaCoast® fire pit Control panel kit

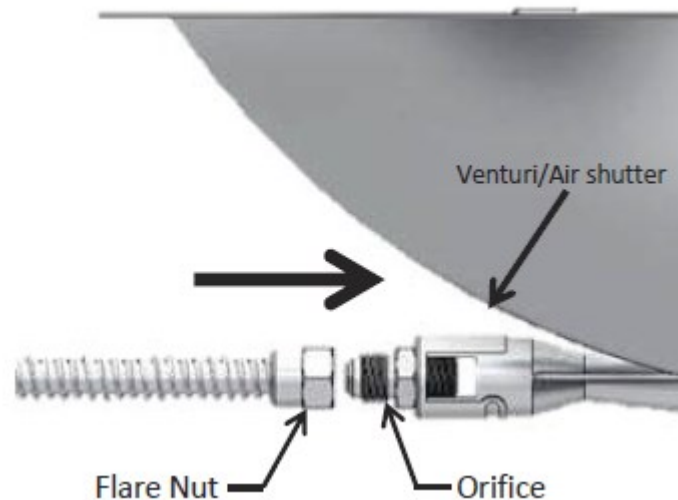

CHECK ENTIRE SYSTEM FOR LEAKS BEFORE OPERATING

Outdoor Fire Pit Control Panel and Gas Valve Assembly

Required tools:

- Philips screwdriver

What's Included:



Control Knob



Gas Valve




Screws [2]

Step 1:

Remove components from packaging and ensure all components are included and intact.

Step 2: Insert valve stem into valve mounting plate in orientation shown. Align screw holes in mounting plate with holes in gas valve.

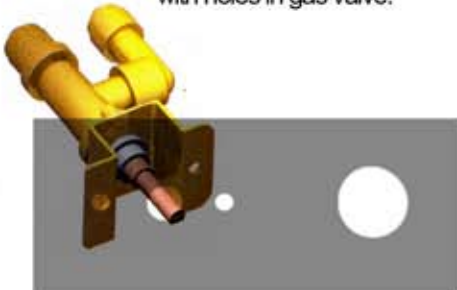

Step 3: Insert two screws and tighten.

Step 4: Slide knob onto shaft of gas valve matching the flat side of the stem of the valve with the corresponding side of the hole in the control knob. The finished control panel should look like the image below.



To Operate Valve -

After installing piezoelectric igniter (included with your burner), press igniter button to ensure it is sparking. Continue holding button. Push in and turn valve to the "ON" position to light. Release igniter button once flame is present. Push in and turn to "OFF" position to extinguish.

6 Lighting and operation

FOR YOUR SAFETY, READ BEFORE LIGHTING



WARNING!

If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury, and/or loss of life.

- A. This appliance can be lit electronically or with a match. When lighting, follow these instructions exactly.
- B. **Before lighting**, smell all around the appliance area for gas. Be sure to smell next to the base of the appliance because some gas is heavier than air and will settle on the floor.
- WHAT TO DO IF YOU SMELL GAS:**
- Do not try to light any appliance.
 - Do not touch any electric switch, do not use any phone nearby.
 - Immediately call your gas supplier from a neighbors phone. Follow gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department
- C. Use only your hand to turn the gas control knob on propane tank (if equipped), never use tools. If the valve won't turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use the appliance if any part has been underwater. Immediately call a qualified service technician to inspect the appliance and replace any part which has been underwater.
- E. The gas pressure regulator provided with this appliance must be used. This regulator is set for an outlet pressure of 10.5 inches water column.

Lighting Instructions

1. Depress button on igniter and verify a spark is being produced between the electrode tip and receiving probe.
2. Ensure control panel valve is in the "OFF" position and slowly open valve on propane tank. If using natural gas or whole-house LP, open ball valve. If not using a control valve, skip this procedure until step 3.
3. Depress igniter button and continue holding button while turning control valve to the on position. Release button once flame is present.

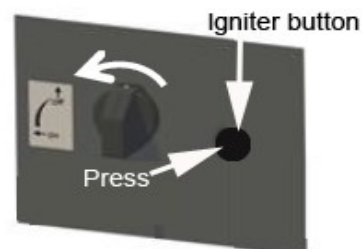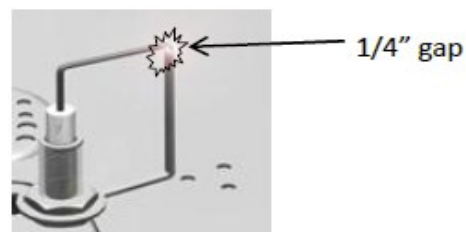

To Extinguish: Turn control valve to "OFF" position. Close valve on propane tank while not in use.

Initial break-in procedure: When you light the appliance, you may notice that it produces heat which may have an odor. If you feel this odor is excessive it may require an initial three to four hour continuous burn on high.

! WARNING

FIRE RISK – HIGH TEMPERATURES

Keep combustible household items away from appliance.

- Do NOT obstruct combustion and ventilation air.
- Do NOT place combustible items on top of or near appliance.
- Keep furniture, draperies away from appliance.
- Do NOT use, lantern fuel, kerosene, charcoal lighter fluid, or similar liquids in this appliance.
- Combustible materials, flammable liquids, or vapors may ignite.

7 Finishing

If only a CabanaCoast® burner was purchased, personalize your Fire Pit with noncombustable decorative items such as bricks, landscaping blocks, or rocks.

CabanaCoast also sells a variety of fire pit tables to fit each of our burners as shown below (not all models shown. Discover more at CabanaCoast.com)



30036M-4202 Mesa 42" Round



30036V-4802 48" Venice Chat Firepit



30036V-5836 58"*36" Venice Firepit



30036-48 48" Round Hampton Firepit



30036H-5032 50"*32" Hampton Firepit



30036-4202 Monaco 42" Round Firepit



30036-5838 58"*38" Monaco Firepit

8 Troubleshooting

Symptom		Possible Causes		Corrective Actions
1	CabanaCoast® Fire Pit won't light.	A	No LP in tank, or NG main not turned on.	Check the LP (propane) tank. You may be out of gas. Or check Natural Gas valve at main.
		B	Plugged burner orifice.	Check the burner orifice for stoppage. Remove stoppage.
2	Low flames or won't stay lit.	A	Manual shutoff valve (on/off control knob) open or not in-stalled between LP tank and appliance.	Close LP tank and manual shutoff valves. Open LP tank valve first, THEN the manual shutoff valve.
3	Blue Flames	A	This is a result of normal operation and flames will begin to yellow as unit is allowed to burn for 16-20 minutes.	Do nothing.
		B	Improper air/fuel mixture related to air shutter position.	Close air shutter. (for LP, leave ¼" open, Natural gas 1/16" open)
4	Metallic noise	A	Noise is caused by metal expanding and contracting as it heats up and cools down, similar to the sound produced by a furnace or heating duct. This noise does not affect the operation or longevity of the appliance.	Do nothing.
5	Fire glass cracking or splitting	A	Heat and/or abrupt temperature changes.	This is a property of glass and may happen occasionally. Do nothing. This is completely normal.
6	Piezoelectric Igniter makes clicking sound but no visible spark is produced	A	Piezoelectric Igniter is improperly grounded	Refer to section 4-C on Page 9 for grounding instructions . Check all wire connections.
		B	Ignition or ground wire not plugged in.	
		C	Igniter tip set too far from rounding probe	Check that tip of Piezoelectric Igniter is within ¼" of grounding probe. Gently bend igniter tip or grounding probe by hand to achieve a smaller gap.

9 Service and maintenance

Although the frequency of appliance servicing and maintenance will depend on use and the type of installation, a qualified service technician should perform an appliance check-up annual.

Storage of an appliance indoors is permissible only if the cylinder is disconnected and removed from the appliance.

The use of a coordinating burner cover and protective cover during the off season is highly recommended to keep your table and burner looking new and ensuring extended trouble-free operation.

! WARNING

Risk of injury or property damage

Before servicing

- Turn off utilities to appliance.
- Ensure appliance is completely cooled

! WARNING



Annual inspection by qualified technician recommended.

Check:

- Obstructions of combustion and ventilation air.
- Condition of burner assembly
- burner air shutter adjustment.
- Gas connections and fittings



Risk of:

- Fire.
- Delayed ignition or explosion
- Exposure to combustion fumes
- Odors



Maintenance and Service Tasks

For service calls: Contact the store your product was purchased from first. Contact CabanaCoast at 1-855-502-9988 if further assistance is needed.

Inspect	Maintenance Tasks	
Burner Assembly	1	Remove decorative glass and examine burner. Vacuum and wipe out as needed. Use caution when cleaning these areas
	2	Inspect for warping and corrosion. Repair as necessary
	3	Check the hose connecting the LP gas cylinder to ensure it is not damaged. Replace as necessary.
	4	Verify air shutter area is clean
Burner Ignition and Operation	1	Verify all gas connections are tight and leak-free
	2	Clean burner top, inspect for plugged ports, corrosion, or deterioration. Replace burner if necessary.
	3	Inspect for flame problems.
	4	Verify air shutter is clear of dust and debris and is in correct position for the gas type being used.
	5	Inspect orifice for soot, dirt, or corrosion
	6	Verify manifold and inlet pressures. Adjust regulator as required.
Gas Hose with Regulator	1	The gas hose with regulator supplied with appliance must be used for LP installations. The replacement must be those specified by the appliance manufacturer

10 Reference Materials

A. Service Parts List

#	Description of Part	Part Number	Qty.
1	Burner Assembly	SRV-BA-CB 20/1224/2424/1242	1
2	Flexible Metal Gas Line	SRV-FT-CF	1
3	Orifice – NG/LP (#31) For CB-20(NG), CB-1224 (NG), CB-1242(whole-house LP)	NGK-CF	1
4	Orifice – NG (#17) For CB-2424	NGK-17	1
5	Orifice – LP (#36) For CB-2424	LPK-36	1
6	Orifice – NG(#21) For CB-1242	NGK-21	1
7	Orifice – LP (#43) For CB-1242 and CB-2424 (LP- 20lb tank) ,CB-20 (LP), CB-1224(LP)	LPK-43	1
9	Valve Assembly	SRV-VA-CB	1
11	Piezoelectric Igniter	CF-Sparker	1
12	Ignition Electrode CB-20/CF-1224/CB-2424/CB-1242	CB-Electrode CB-20/CB-	1
13	Replacement Fire Glass for CabanaCoast® Fire Pit (5lb bag)	CCB20-Glass	1
14	Grounding wire for CabanaCoast® Fire Pit (All models)	SPK-GND	1

CabanaCoast® Fire Warranty

CabanaCoast® extends the following warranty for CabanaCoast® outdoor Fire Pits used in the United States of America or Canada. Employees of CabanaCoast® have no authority to make any warranty or authorize any remedies in addition to or inconsistent with the terms of this warranty. This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

CabanaCoast® warrants that this CabanaCoast® Outdoor Fire Pit (the "Product") will be free from defects in material and workmanship for a period of one year from its date of purchase. Stainless steel parts and assemblies carry a limited lifetime warranty. This warranty is subject to the conditions, exclusions and limitations described below.

This warranty applies only to the original owner of the Product and is non-transferable. CabanaCoast® obligation under this warranty does not extend to damages resulting from (1) assembly, operation or maintenance of the Product not in accordance with the Installation/Assembly Instructions, Operating Instructions and the Listing Agency Identification Label furnished with the Product; (2) installation or use which does not comply with local building codes and ordinances; (3) shipping, improper handling, improper operation, abuse, misuse, accident or unworkmanlike repairs; (4) use of fuels other than those specified in the Operating Instructions; (5) Installation or use of components not supplied with the Product or any other components not expressly authorized and approved in writing by CabanaCoast®; and/or (6) modification of the Product not expressly authorized and approved in writing by CabanaCoast® Any of the circumstances described in the previous sentence voids this warranty. This warranty is void if the Product or any component has been removed, repaired, or replaced before CabanaCoast® has been afforded a reasonable opportunity to inspect the Product.

This warranty is limited to the replacement or repair of defective components or workmanship and CabanaCoast® may fully discharge its obligations under this warranty by repairing or replacing, at its discretion, the defective components. CabanaCoast® will provide replacement parts at no charge and will pay reasonable and necessary labor and freight costs related to replacing or repairing defective components under this warranty. The maximum amount recoverable under this warranty is limited to the purchase price of the Product and, if CabanaCoast® is unable to provide replacement or repair in an expedient and cost-effective manner, CabanaCoast® may discharge all obligations under this warranty by refunding the purchase price of the Product.

EXCEPT TO THE EXTENT PROVIDED BY LAW, CABANACOAST® MAKES NO EXPRESS WARRANTIES OTHER THAN THE WARRANTY EXPRESSED HEREIN. THE DURATION OF ANY IMPLIED WARRANTY IS LIMITED TO THE DURATION OF THE WARRANTY SPECIFIED ABOVE. IN NO EVENT SHALL CABANA COAST BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY DEFECTS IN THE PRODUCT. Some states do not allow limitations on how long an implied warranty lasts, or do not allow exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you.

To obtain service under this warranty, you must:

1. Send written notice of the claimed condition to: CabanaCoast®

7429 Ninth Line Mississauga, ON. L5N 7C3 Canada

2. Affirm that you are the original owner of the Product.

3. Provide CabanaCoast® reasonable opportunity to investigate the claim, including reasonable opportunity to inspect the Product prior to any repair or replacement work and before the Product or any component of the Product has been removed.